

USER'S INSTRUCTIONS

WARNINGS

Should a fault occur, turn the boiler OFF, shut any gas valve, and contact the Installer, or Hunt Heating.

DO NOT store or place in the immediate vicinity of boiler any flammable liquid or materials.

Any serviced or maintenance of the boiler and heating system MUST be carried out by an Authorised Person.

DO NOT block any grilles and air openings to the room in which the boiler is installed.

LIGHTING AND OPERATION

To start the boiler, make sure that the gas valve is OPEN, the electricity supply is turned ON and that the room thermostat is ON.

Turn the Selector Knob to the ON position, indicated by a star. A green light should appear indicating that the electric power is ON.

The boiler will light automatically and continue to operate until the temperature set by the room thermostat is obtained. It will then modulate to maintain the set temperature.

To turn the boiler OFF, turn the Selector Knob to the OFF position. The boiler will now shut down. If the boiler is not to be used for a lengthy period, it is advisable to turn OFF the electricity supply and the gas valve.

Should the boiler not operate and a red light appears on the control panel, this indicates that the boiler has failed to ignite correctly. There may also be an orange light, which will either flash or be steady. A steady orange light indicates a faulty boiler thermostat; a flashing orange light indicates insufficient water pressure in the system. Both of them indicate that an Authorised Person must be contacted.

If there are no orange lights, turn the Selector Knob to the ignition position, indicated by a flame symbol and hold until both lights flash then release.

Should the boiler fail to operate, contact an Authorised Person or the Hunt Heating Service Department.